

Product Manual

Removable bollard

CONTENTS

1.General

2.Dimentions

3.Layout

4.Operating



1.General



For correct installation and operation, please read this manual carefully.

Part A:


The bollard is to be held vertically to the ground.

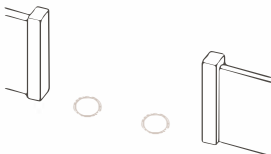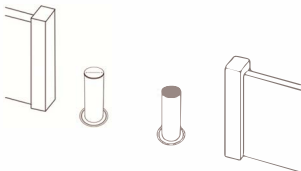


Part B:

The floor must be level with the flange of the bollard.

2.Dimensions

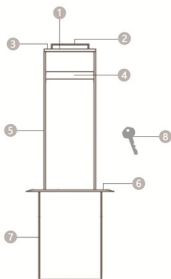

- ① Lock
- ② Handheld
- ③ Cover
- ④ Reflective tape
- ⑤ Bollard
- ⑥ Cover
- ⑦ Casing
- ⑧ Key

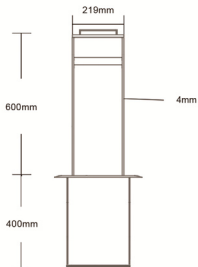


Side view




Top view

3.Layout

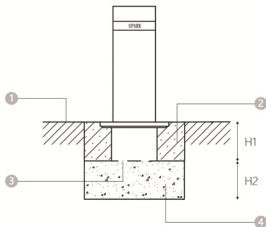

Side view

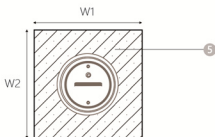

Top view

H1 = Casing height

H2 = 200mm

- ① Level
- ② Cement
- ③ Drainage hole
- ④ Infiltration layer


W1 = 500mm

W2 = 500mm


- ⑤ Road surface

4.Operating


1.Disassembly

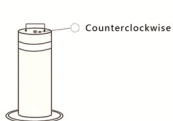

1. Turn counterclockwise to open the lock.

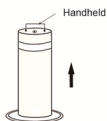


2. Lift

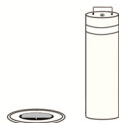


3. Done


2.Assembly

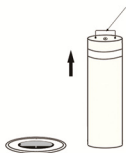

1. Lift

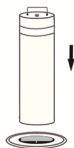

2. Rotate to adjust bollard angle

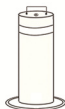

3. Done