


# EM500SS Bulldog EuroClamp

The Bulldog EuroClamp is intended for use on most popular cars, Vans, Caravans, Motorcycles and Trailers with the following Maximum Wheel/Tyre sizes: *A - Height: 180mm. B - Width: 220mm.* Wheel trims must have holes to allow access for outer clamp arm.

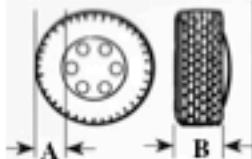

**N.B. MUST BE USED IN CONJUNCTION WITH LOCKING WHEEL NUTS/BOLTS.**

## Fitting Instructions



1. A - Inner Arm. B - Outer Arm.



2. Position inner arm behind wheel, hook into rim.



3. Slide inner and outer arms together, ensuring pointed outer arm fits into recess or hole in wheel, and push lock into nearest hole.



4. To remove clamp, insert key, rotate 1/2 turn, pull on key and/or press inner and outer arms together until lock pops out.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.



MA16-2

### Lock Lubrication.

**IMPORTANT** - To ensure free movement of the lock, spray outside of lock body with WD40 (or equivalent) minimum every four months.

### Key Security. Enter your key number here:

**IMPORTANT** - Your Bulldog product is supplied with two keys. Make a note of your personal key number in the space provided above and **keep it in a safe place.** Should you lose your keys, replacements can only be obtained from the manufacturer through your dealer.